

Connecting a Third Millenium TM4 reader to Net2

Technical Support




\$, (\$'&+- '&+-



]bZc4 Vgk !gYW f]hm'VX

Net2 Reader Connections:

Cable Pinout	ACU terminal
Terminal 1	+12V
Terminal 5	Red LED
-	Amber LED
Terminal 4	Green LED
Terminal 3	Wiegand D0
Terminal 2	Wiegand D1
-	NOT USED
Terminal 7	0V

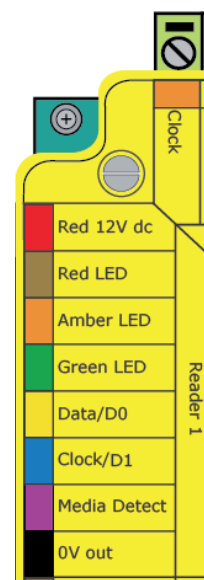

Ensure any unused wires are safely terminated.

Additional information:

The TM4 can be configured to read a variety of different token types, and to output a variety of different data formats. The configuration performed during manufacturer, and the full part number of the unit will indicate the configuration type. If this is unknown, contact Third Millenium to confirm these details, as they will affect the how the Net2 software is configured.